

Dual Rod Cylinder

Ø6, Ø10, Ø16, Ø20, Ø25, Ø32

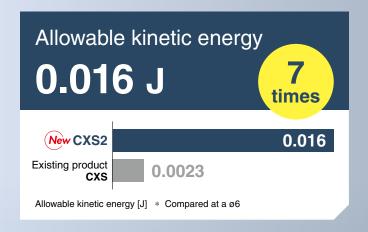

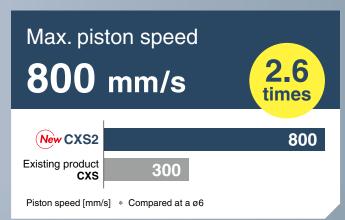













Non-rotating accuracy of $\pm 0.1^{\circ}$ because of the dual rod construction



Stroke is adjustable up to **-5 mm**.

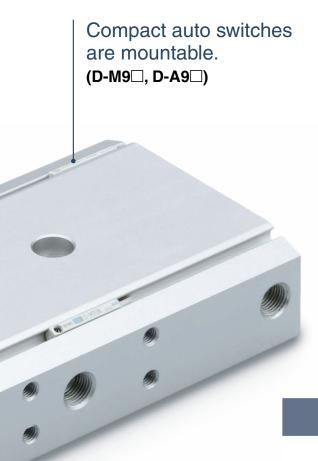

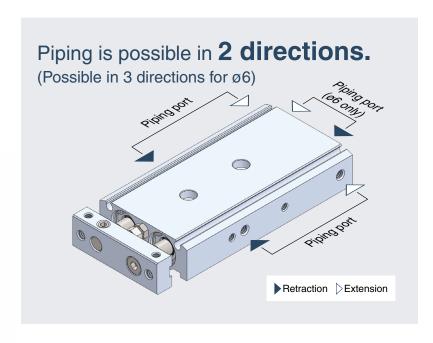

Workpiece can be mounted from **3 directions**.

Front mounting	Bottom mounting	Top mounting

Body can be mounted from 4 directions.

Bottom fixing	Top fixing	Side	fixing
(Fixed body)	(Through-hole fixing)	(Fixed body A)	(Fixed body B)

Series Variations

	Booring					Во	re si:	ze [r	nm]					Standard stroke	Axial	Clean	Cylinder with stable	_
Series/Model	Bearing type	6	10	12	16 /15	20	25	32	40	50	63	80	100	[mm]	piping	series (10-series)	lubrication function (Lube-retainer)	Page
New Basic type/ CXS2	Slide bearing Ball bushing bearing	•	•	_	•	•	•	•	_	_	_	_	_	ø6: 10 to 100 ø10: 10 to 150 ø16 to ø32: 10 to 200	(ø6)	_	_	p. 11
Compact type/ CXSJ		•	•	_	•	•	•	•	_	_	_	_	_	ø6: 10 to 50 ø10: 10 to 75 ø16 to ø32: 10 to 100	(ø6, ø10)	_	_	
Basic type/ CXS		•	•	_	•	•	•	•	_	_	_	_	_	ø6: 10 to 50 ø10: 10 to 75 ø15 to ø32: 10 to 100	(ø6)	•	•	
With air cushion/	Slide bearing Ball bushing bearing	_	_	_	_	•	•	•	_	_	_	_	_	ø20 to ø32: 10 to 100	_	_	_	Web
With end lock for retraction side/		•	•	_	•	•	•	•	_	_	_	_	_	Ø6 to Ø15: 10 to 50 Ø20 to Ø32: 10 to 100	(ø6)	_	_	Catalog
Double rod type/ CXSW		•	•	_	•	•	•	•	_	_	_	_	_	Ø6 to Ø15: 10 to 50 Ø20 to Ø32: 10 to 100	_	_	_	
Basic type/ JMGP	Slide bearing	_	_	•	•	•	•	•	•	•	•	•	•	ø12, ø16: 10 to 100 ø20, ø25: 20 to 150 ø32 to ø100: 20 to 200	_	_	_	



CONTENTS

Dual Rod Cylinder CXS2 Series



● Model Selectionp. 5
How to Orderp. 11
Specificationsp. 12
Construction: Slide Bearingp. 14
Construction: Ball Bushing Bearingp. 15
Dimensionsp. 16
● Auto Switch Mounting p. 19
Prior to Use
Auto Switch Connections and Examples p. 20
Specific Product Precautionsp. 21

Model Selection: Basic Type

⚠ Caution Confirmation of theoretical output is required separately. Refer to the "Theoretical Output" on page 12.


Basic Type: CXS2

Vertical Mounting

vertical		9									
Moun orienta			L m								
Max. speed	d [mm/s]	Up to 200	Up to 400	Up to 600	Over 600						
Stroke	[mm]	All strokes									
	ø 6	1	2	3	4						
	ø 10										
Selection	ø 16										
graph	ø 20	5	6	7	8						
	ø 25										
	ø 32										

^{*} Max. speeds are: ø6/ø10: 800 mm/s, ø16/ø20: 700 mm/s, and ø25/ø32: 600 mm/s.

Horizontal Mounting

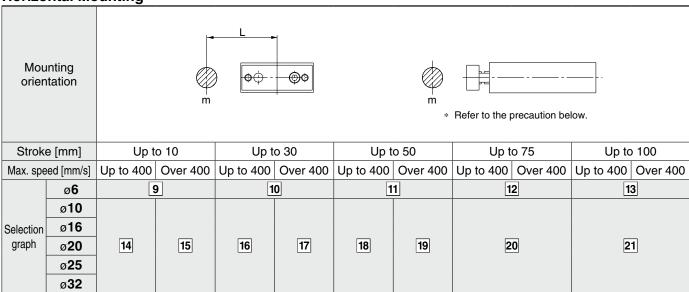

Max. speeds are: ø6/ø10: 800 mm/s, ø16/ø20: 700 mm/s, and ø25/ø32: 600 mm/s.


∕∖∖ Caution

If the cylinder is horizontally mounted and the plate end does not reach the load's center of gravity, use the formula below to calculate the imaginary stroke L' that includes the distance between the load's center of gravity and the plate end. Select the graph that corresponds to the imaginary stroke L'.



k: Distance between the center and end of the plate

. Diotario del								
ø 6	2.75 mm							
ø 10	4 mm							
ø 16	5 mm							
ø 20	6 mm							
ø 25	O IIIIII							
ø 32	8 mm							

 

When using CXS2M6-10 and L = 15 mm:

Imaginary stroke L' = 10 + 2.75 + 15 = 27.75


Therefore, the graph used for your model selection should be the one for CXS2M6-30.





Vertical Mounting

ø6 Graph (1) V = 200 (mm/s)Load mass m [kg] CXS2L CXS2M

100

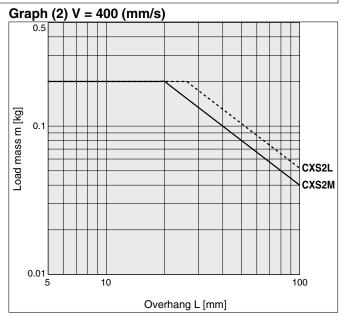


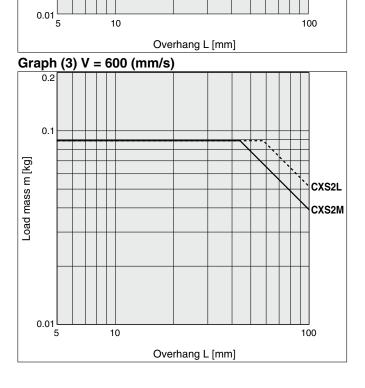


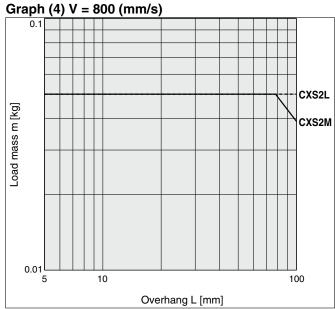


Vertical Mounting

 
ø10 to ø32

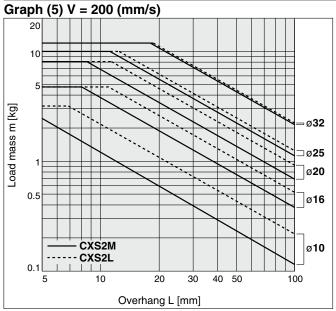




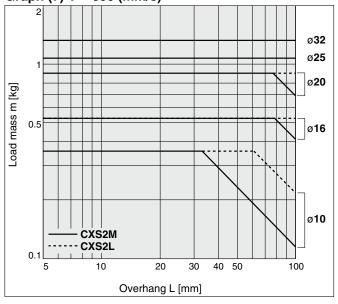

Graph (6) V = 400 (mm/s)

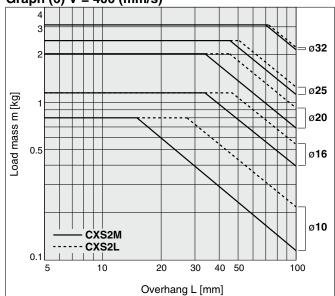


Graph (8) $V = 700 \text{ (mm/s)} (800 \text{ mm/s for } \emptyset 10)$

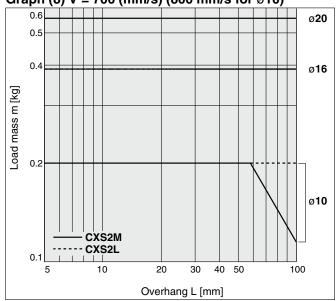


Horizontal Mounting

ø6

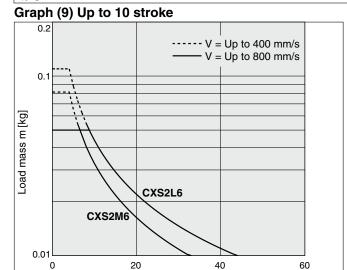


Overhang L [mm]



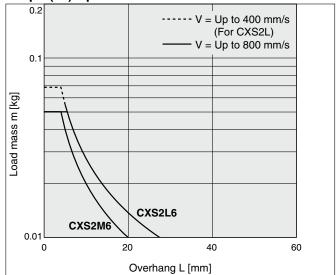


Graph (11) Up to 50 stroke


0

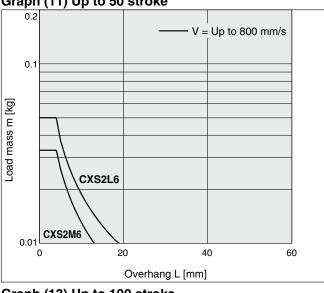

Graph (12) Up to 75 stroke

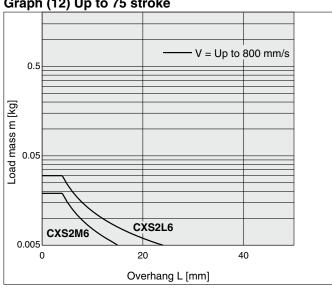



Graph (13) Up to 100 stroke

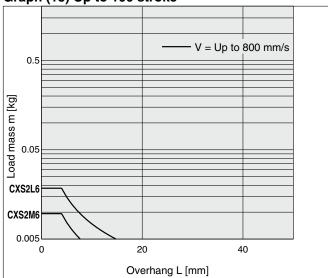



Horizontal Mounting

ø10 to ø32

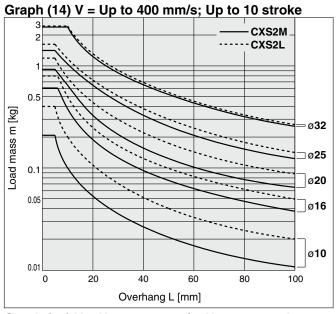

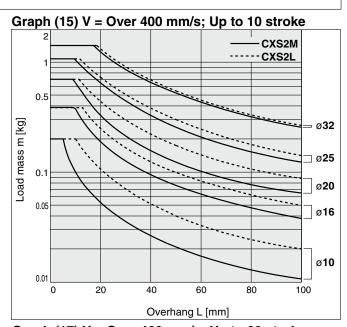


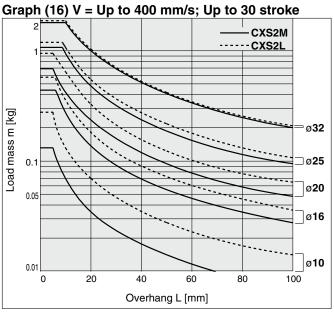


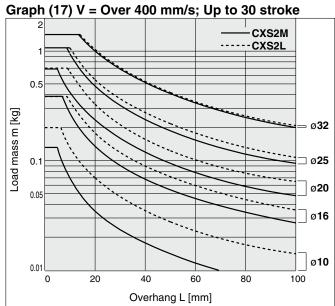


Horizontal Mounting


ø10 to ø32

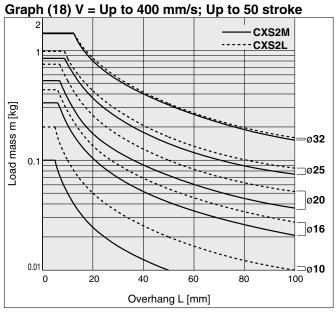

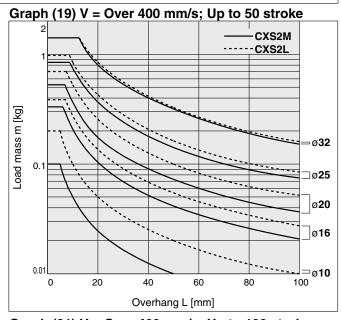


Graph (20) V = Over 400 mm/s; Up to 75 stroke

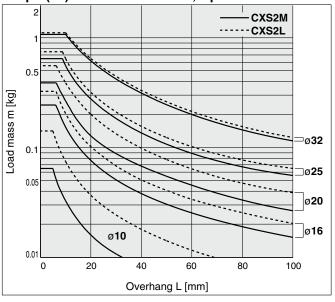

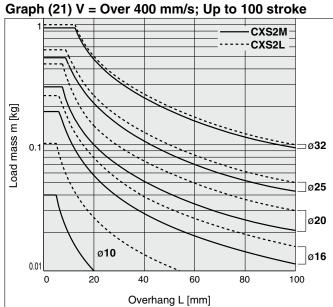

Dual Rod Cylinder Basic Type CXS2 Series Ø6, Ø10, Ø16, Ø20, Ø25, Ø32

How to Order

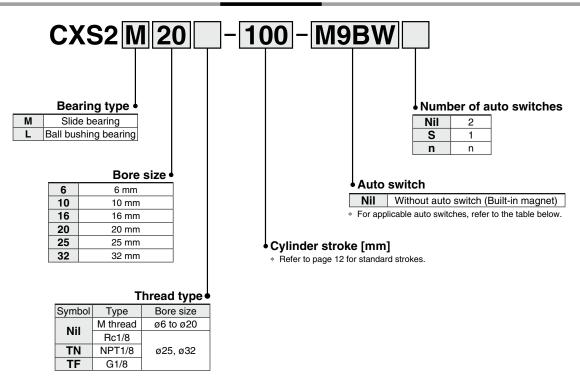

Applicable Auto Switches/Refer to the Web Catalog for further information on auto switches.

						Load vol	ltage	Auto owit	ch model	Lead wir	e len	gth [r	n]*3			
Type	Special function	Electrical entry	Indicator light	Wiring (Output)		DC	AC	Auto Swit		0.5	1	3	5	Pre-wired connector	Applica	ble load
		,		(ΛΟ	Perpendicular In-line		(Nil)	(M)	(L)	(Z)			
				3-wire (NPN)		5 V, 12 V		M9NV	M9N	•	•	•	0	0	IC circuit	
등	_			3-wire (PNP)		5 V, 12 V		M9PV	M9P	•	•	•	0	0	IC CIICUII	
switch				2-wire]	12 V		M9BV	M9B	•	•	•	0	0	_	
auto 8				3-wire (NPN)	24 V	5 1/ 40 1/		M9NWV	M9NW	•	•	•	0	0	10	Relay,
ac	Diagnostic indication (2-color indicator)	Grommet	Yes	3-wire (PNP)		5 V, 12 V	_	M9PWV	M9PW	•	•	•	0	0	IC circuit	
state	(2-color indicator)			2-wire	1	12 V		M9BWV	M9BW	•	•	•	0	0	_	1 20
<u> </u>				3-wire (NPN)]	5 V, 12 V		M9NAV*1	M9NA*1	0	0	•	0	0	IC circuit	
Solid	Water resistant (2-color indicator)			3-wire (PNP)	1	5 V, 12 V		M9PAV*1	M9PA*1	0	0	•	0	0	IC circuit	
	(2 color maloator)			2-wire		12 V		M9BAV*1	M9BA*1	0	0	•	0	0	_	
_ tc			Vas	3-wire (NPN)	_	5 V	_	A96V	A96	•	•	•	•	0	IC circuit	_
Reed auto switch	— Grommet Yes	res	Queiro	24.1/	12 V	100 V	A93V	A93	•	•	•	•	O*2	_	Relay,	
autc			None	2-wire 24	24 V	5 V, 12 V	100 V or less	A90V	A90	•	•	•	•	O*2	IC circuit	PLC

- *1 Water-resistant type auto switches can be mounted on the above models, but SMC cannot guarantee water resistance. Please contact SMC regarding water-resistant types with the above model numbers.
- *2 The load voltage used is 24 VDC.
- * Auto switches marked with a "O" are produced upon receipt of order.
- Since there are applicable auto switches other than those listed above, refer to page 19 for details.
- For details on auto switches with pre-wired connectors, refer to the Web Catalog.
- * Auto switches are shipped together with the product but do not come assembled.





Specifications

Bore size [mm]	6	10	16	20	25	32						
Fluid	Air (Non-lube)											
Proof pressure		1.05 MPa										
Max. operating pressure			0.7	MPa								
Min. operating pressure	0.15 MPa	0.1	MPa		0.05 MPa							
Ambient and fluid temperatures		-1	0 to 60°C	(No freezir	ng)							
Piston speed	30 to 800 mm/s 30 to 700 mm/s 30 to 600 mm/s											
Cushion			Rubber	bumper								
Stroke adjustable range	0	to -5 mm	compared	to the star	ndard strok	е						
Port size	M5 x 0.8 Rc (NPT, G) 1/8											
Bearing type	Slide bearing, Ball bushing bearing (Same dimensions for both											
Allowable kinetic energy	0.016 J	0.064 J	0.095 J	0.17 J	0.27 J	0.32 J						

Standard Stroke Range

		[mm]
Model	Stroke range	Standard stroke
CXS2□6	1 to 100	10, 20, 30, 40, 50, 60, 70, 75, 80, 90, 100
CXS2□10	1 to 150	10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 75, 80, 90, 100, 110, 120, 125, 150
CXS2□16		10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 75, 80, 90, 100, 110, 120, 125, 150, 175, 200
CXS2□20	1 to 200	10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 75, 80, 90, 100, 110, 120, 125, 150, 175, 200
CXS2□25	1 10 200	10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 75, 80, 90, 100, 110, 120, 125, 150, 175, 200
CXS2□32		10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 75, 80, 90, 100, 110, 120, 125, 150, 175, 200

* Intermediate strokes are available as special orders.

Refer to page 19 for cylinders with auto switches.

- · Auto Switch Proper Mounting Position (Detection at stroke end)
- · Operating Range
- $\cdot \ \text{Auto Switch Mounting Dimensions} \\$
- · Auto Switch Mounting

Moisture Control Tube IDK Series

When operating an actuator with a small bore size and a short stroke at a high frequency, dew condensation (water droplets) may occur inside the piping depending on the conditions. Simply connecting the moisture control tube to the actuator will prevent dew condensation from occurring. For details, refer to the **Web Catalog**.

Theoretical Output

											[N]
Model	Rod size	Operating	Piston area			Oper	ating pre	essure [MPa]		
Model	[mm]	direction	[mm ²]	0.1	0.15	0.2	0.3	0.4	0.5	0.6	0.7
CXS2□6	4	OUT	56	_	8.4	11.2	16.8	22.4	28.0	33.6	39.2
CASZLIO	4	IN	31	_	4.6	6.2	9.3	12.4	15.5	18.6	21.7
CXS2□10	6	OUT	157	15.7	1	31.4	47.1	62.8	78.5	94.2	110
CASZ	O	IN	100	10.0	-	20.0	30.0	40.0	50.0	60.0	70.0
CXS2□16	8	OUT	402	40.2	_	80.4	121	161	201	241	281
CASZLIB	0	IN	301	30.1		60.2	90.3	120	151	181	211
CXS2□20	10	OUT	628	62.8		126	188	251	314	377	440
CA32_20	10	IN	471	47.1	-	94.2	141	188	236	283	330
CXS2□25	12	OUT	982	98.2	_	196	295	393	491	589	687
CA32_25	12	IN	756	75.6		151	227	302	378	454	529
CXS2□32	16	OUT	1608	161		322	482	643	804	965	1126
UA32∐32	10	IN	1206	121		241	362	482	603	724	844
* Theoretics	l output [NII _ Dr	accura [M	IDal v Di	cton aro	a [mm2]					

^{*} Theoretical output [N] = Pressure [MPa] x Piston area [mm²]


Weight

																					[kg]
Model										Stroke	range	[mm]									
Model	10	15	20	25	30	35	40	45	50	60	70	75	80	90	100	110	120	125	150	175	200
CXS2M6	0.08	_	0.10	_	0.11	_	0.12	_	0.14	0.15	0.17	0.17	0.18	0.19	0.21	_	_	_	_	_	
CXS2L6	0.08	_	0.10	_	0.11	_	0.12	_	0.14	0.15	0.17	0.17	0.18	0.19	0.21	_	_	_	_	_	
CXS2M10	0.14	0.15	0.16	0.17	0.18	0.19	0.20	0.21	0.22	0.24	0.26	0.27	0.28	0.30	0.32	0.34	0.36	0.37	0.42	_	
CXS2L10	0.14	0.15	0.16	0.17	0.18	0.19	0.20	0.21	0.22	0.24	0.26	0.27	0.28	0.30	0.32	0.34	0.36	0.37	0.42	_	
CXS2M16	0.24	0.26	0.27	0.28	0.30	0.31	0.32	0.34	0.35	0.38	0.40	0.42	0.43	0.45	0.48	0.51	0.53	0.55	0.61	0.68	0.75
CXS2L16	0.26	0.27	0.29	0.30	0.31	0.33	0.34	0.35	0.37	0.39	0.42	0.43	0.45	0.47	0.50	0.53	0.55	0.57	0.63	0.70	0.77
CXS2M20	0.40	0.41	0.43	0.45	0.47	0.49	0.50	0.52	0.54	0.58	0.61	0.63	0.65	0.69	0.72	0.76	0.79	0.81	0.90	0.99	1.09
CXS2L20	0.41	0.42	0.44	0.46	0.48	0.50	0.51	0.53	0.55	0.59	0.62	0.64	0.66	0.70	0.73	0.77	0.80	0.82	0.91	1.00	1.10
CXS2M25	0.59	0.62	0.65	0.67	0.70	0.72	0.75	0.78	0.80	0.86	0.91	0.94	0.96	1.02	1.07	1.12	1.17	1.20	1.33	1.47	1.60
CXS2L25	0.60	0.63	0.66	0.68	0.71	0.73	0.76	0.79	0.81	0.87	0.92	0.95	0.97	1.03	1.08	1.13	1.18	1.21	1.34	1.48	1.61
CXS2M32	1.09	1.13	1.18	1.22	1.26	1.30	1.34	1.38	1.43	1.51	1.59	1.64	1.68	1.76	1.84	1.93	2.01	2.05	2.26	2.47	2.68
CXS2L32	1.11	1.15	1.19	1.23	1.28	1.32	1.36	1.40	1.44	1.53	1.61	1.65	1.69	1.78	1.86	1.94	2.03	2.07	2.28	2.49	2.69

Operating Conditions

Non-rotating Accuracy

 Non-rotating accuracy θ° at the retracted end and without a load should be less than or equal to the value provided in the table below as a guide.





Bore size [mm]	ø 6 to ø 32
CXS2M (Slide bearing)	10.40
CXS2L (Ball bushing bearing)	±0.1°

CXS2□6 to 32

Deflection at the Plate End

 An approximate plate-end deflection ${\bf X}$ without a load is shown in the graph below.




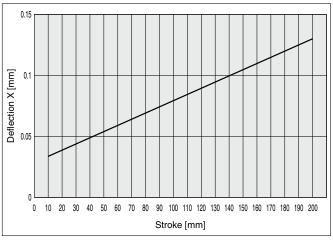


As a guide, ø6 is up to 100 mm strokes, ø10 is up to 150 mm strokes, and ø16 to ø32 are up to 200 mm strokes.

Max. Load Mass

 
When the cylinder is mounted as shown in the diagrams below, the max. load mass W should not exceed the values illustrated in the graph.



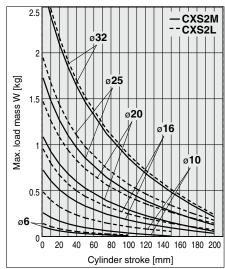


Construction: Slide Bearing

CXS2M6

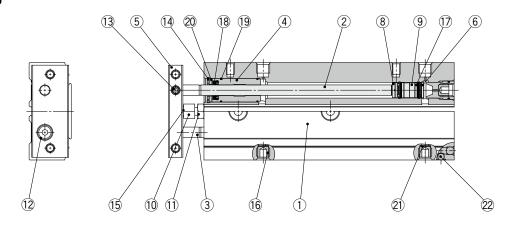

CXS2M10 to 32

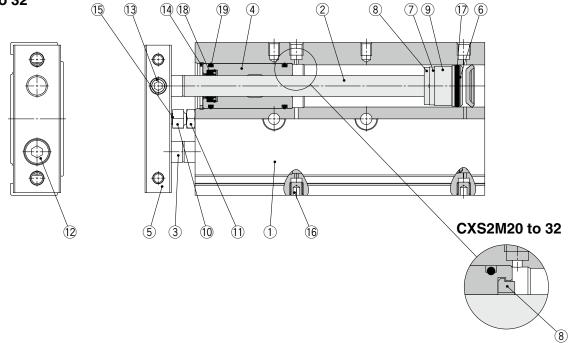

Component Parts

<u> </u>	ilipolielit Parts		
No.	Description	Material	Note
1	Housing	Aluminum alloy	Hard anodized
2	Piston rod A	Carbon steel*1	Hard chrome plating
3	Piston rod B	Carbon steel*1	Hard chrome plating
4	Rod cover	Aluminum bearing alloy	
5	Plate	Aluminum alloy	Anodized
6	Piston A	Aluminum alloy	
7	Piston B	Aluminum alloy	
8	Bumper	Urethane	
9	Magnet	_	
10	Bumper bolt	Carbon steel	Zinc chromated
11	Hexagon nut	Carbon steel	Zinc chromated
12	Hexagon socket head cap screw	Chromium steel	Zinc chromated
13	Hexagon socket head set screw	Chromium steel	Zinc chromated
14	Retaining ring	Special steel	Phosphate coating

^{*1} Stainless steel for CXSM6

Component Parts

CU	ilipolielit raits		
No.	Description	Material	Note
15	Bumper	Urethane	
16	Plug	Chromium steel	Zinc chromated
17	Piston seal	NBR	
18	Rod seal	NBR	
19	O-ring	NBR	
20	Seal retainer	Aluminum alloy	
21	Port spacer	Aluminum alloy	
22	Steel ball	Special steel	Hard chrome plating

Replacement Parts: Seal Kit

Bore size [mm]	Part no.	Contents
6	CXS2M6-PS	
10	CXS2M10APS	
16	CXS2M16-PS	Set of nos. above
20	CXS2M20-PS	17, 18 and 19
25	CXS2M25-PS	
32	CXS2M32-PS	


^{*} Seal kit includes ①, ® and ®. Order the seal kit, based on each bore size.
* Since the seal kit does not include a grease pack, order it separately.

Grease pack part no.: GR-S-010 (10 g)




Construction: Ball Bushing Bearing

CXS2L6

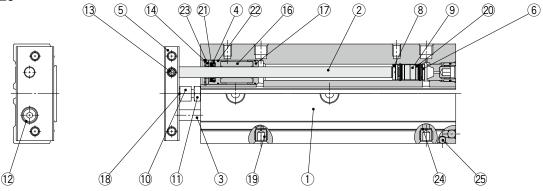

CXS2L10 to 32

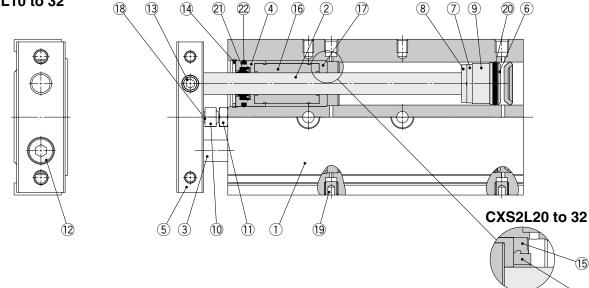

Component Parts: Standard Piping

CU	ilipollelli Paris.	Standard Pipin	9
No.	Description	Material	Note
1	Housing	Aluminum alloy	Hard anodized
2	Piston rod A	Special steel	Hard chrome plating
3	Piston rod B	Special steel	Hard chrome plating
4	Rod cover	Aluminum bearing alloy	
5	Plate	Aluminum alloy	Anodized
6	Piston A	Aluminum alloy	
7	Piston B	Aluminum alloy	
8	Bumper	Urethane	
9	Magnet	_	
10	Bumper bolt	Carbon steel	Zinc chromated
11	Hexagon nut	Carbon steel	Zinc chromated
12	Hexagon socket head cap screw	Chromium steel	Zinc chromated
13	Hexagon socket head set screw	Chromium steel	Zinc chromated
14	Retaining ring	Special steel	Phosphate coating
15	Bumper holder	ø20 to ø32:	
15	Bumper molder	Synthetic resin	
16	Ball bushing	_	

Component Parts

ilipolielit Farts		
Description	Material	Note
	ø10: Synthetic resin	
Bearing spacer	ø6, ø16:	
	Aluminum bearing alloy	
Bumper	Urethane	
Plug	Chromium steel	Zinc chromated
Piston seal	NBR	
Rod seal	NBR	
O-ring	NBR	
Seal retainer	Aluminum alloy	
Port spacer	Aluminum alloy	
Steel ball	Special steel	Hard chrome plating
	Description Bearing spacer Bumper Plug Piston seal Rod seal O-ring Seal retainer Port spacer	Description Bearing spacer Bumper Plug Piston seal Rod seal O-ring Seal retainer Port spacer Material Ø10: Synthetic resin Ø6, Ø16: Aluminum bearing alloy Urethane Chromium steel NBR NBR NBR Aluminum alloy Aluminum alloy Aluminum alloy

8

Replacement Parts: Seal Kit


Bore size [mm]	Part no.	Contents
6	CXS2L6-PS	
10	CXS2L10BPS	
16	CXS2L16-PS	Set of nos. above
20	CXS2L20-PS	20, 21 and 22
25	CXS2L25-PS	
32	CXS2L32-PS	





^{*} Seal kit includes ②, ② and ②. Order the seal kit, based on each bore size.
* Since the seal kit does not include a grease pack, order it separately.

Grease pack part no.: GR-S-010 (10 g)

Dimensions: Ø6

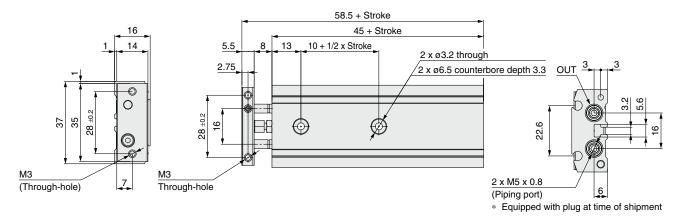


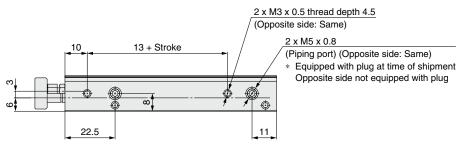


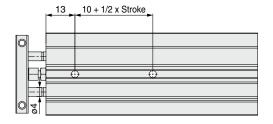

SMC

 
Dimensions: Ø10, Ø16

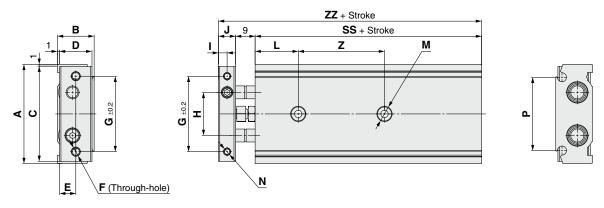



(Piping port) (Opposite side: Same)

* Equipped with plug at time of shipment
Opposite side not equipped with plug

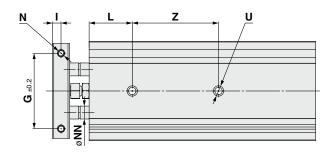


																				[mm]
Model	Α	В	С	D	Е	F	G	Н	1	J	L	M	N	NN	Р	Q	QQ	R	U	V
CXS2□10	46	17	44	15	7.5	2 x M4 x 0.7	35	20	4	8	20	2 x Ø3.4 through 2 x Ø6.5 counterbore depth 3.3	thread depth 5	90	34	8.5	7	130	2 x M4 x 0.7 thread depth 7	
CXS2□16	58	20	56	18	9	2 x M5 x 0.8	45	25	5	10	30	2 x Ø4.3 through 2 x Ø8 counterbore depth 4.4	2 x M4 x 0.7 thread depth 6	ø8	45	10	10	38.5	2 x M5 x 0.8 thread depth 8	4 x M4 x 0.7 thread depth 5

Dimensions by Stroke

Symbol	SS	Z										
Model Stroke	33	10, 15, 20, 25	30, 35, 40, 45, 50	60, 70, 75, 80	90,100	110, 120, 125	150	175, 200	ZZ			
CXS2□10	55	30	40	50	60	70	80	_	72			
CXS2□16	60	25	35	45	55	65	75	145	79			

Dimensions: Ø20, Ø25, Ø32

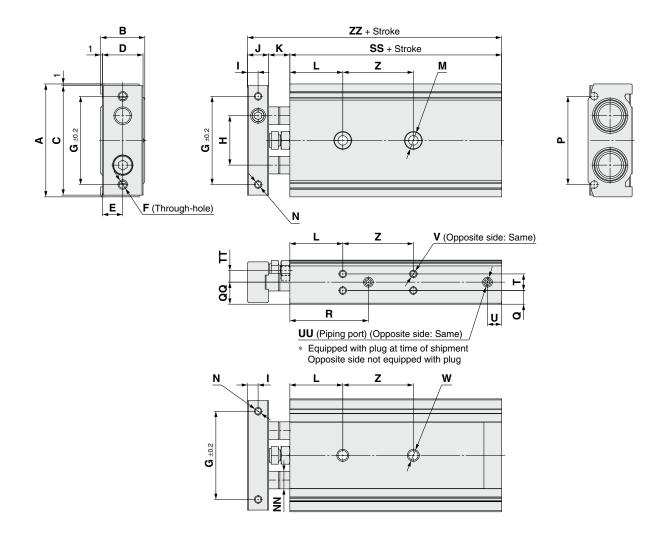

																[mm]
Model	A	В	С	D	E	F	G	н	ı	J	К	L	М	N	NN	Р
CXS2□20	64	25	62	23	11.5	2 x M5 x 0.8	50	28	6	12	12	30	2 x ø5.5 through 2 x ø9.5 counterbore depth 5.3	2 x M4 x 0.7 thread depth 6	ø10	50
CXS2□25	80	30	78	28	14	2 x M6 x 1.0	60	35	6	12	12	30	2 x ø6.9 through 2 x ø11 counterbore depth 6.3	2 x M5 x 0.8 thread depth 7.5	ø12	59.6
CXS2□32	98	38	96	36	18	2 x M6 x 1.0	75	44	8	16	14	30	2 x ø6.9 through 2 x ø11 counterbore depth 6.3	2 x M5 x 0.8 thread depth 8	ø16	75

Model	Q	QQ	В	_	тт	U		UU	v	W		
Model	L C	uu	R	'	' '	U	Nil	TN	TF	V	Ϋ́Υ	
CXS2□20	7.75	12.5	45	9.5	6.5	8	4 x M5 x 0.8	_	_	8 x M4 x 0.7 thread depth 5.5	2 x M6 x 1.0 thread depth 10	
CXS2□25	8.5	15	46	13	9	9	4 x Rc1/8	4 x NPT1/8	4 x G1/8	8 x M5 x 0.8 thread depth 7.5	2 x M8 x 1.25 thread depth 12	
CXS2□32	9	19	56	20	11.5	10	4 X HC1/8		4 X G 1/8	8 x M5 x 0.8 thread depth 7.5	2 x M8 x 1.25 thread depth 12	

Dimensions by Stroke


Symbol	SS		77				
Model Stroke	33	10, 15, 20, 25	30, 35, 40, 45, 50	60, 70, 75, 80, 90, 100	110, 120, 125, 150	175, 200	22
CXS2□20	70	30	40	60	80	100	94
CXS2□25	72	30	40	60	80	100	96
CXS2□32	82	40	50	70	90	110	112



CXS2 Series Auto Switch Mounting

Auto Switch Proper Mounting Position (Detection at Stroke End)

Electrical entry direction: Inward

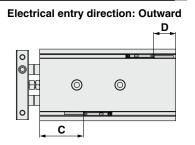

Operating Range


						[mm]						
Austo ausitala mandal		Bore size										
Auto switch model	6	10	16	20	25	32						
D-A9□, D-A9□V	6.5	5.5	5.5	7	7.5	9						
D-M9□, D-M9□V D-M9□A, D-M9□AV D-M9□W, D-M9□WV	2.5	3	3.5	4.5	4.5	5						

Since this is a guideline including hysteresis, not meant to be guaranteed (assuming approx. ±30% dispersion). There may be the case it will vary substantially depending on an ambient environment.

Bore size		D-A	.9□			D-A	9□V		D-M9□(E), D-I D-M9□A			□W	D-M9□(E)V, D-M9□WV			D-M9□A				
[mm]	Α	В	С	D	Α	В	С	D	Α	В	С	D	Α	В	С	D	Α	В	С	D
6	17	8	12.5	3.5	17	8	15	6	21	12	11	2	21	12	13	4	21	12	9	0
10	25	10	20.5	5.5	25	10	23	8	29	14	19	4	29	14	21	6	29	14	17	2
16	34	5.5	29.5	1	34	5.5	32	3.5	38	9.5	28	-0.5	38	9.5	30	1.5	38	9.5	26	-2.5
20	40	10	35.5	5.5	40	10	38	8	44	14	34	4	44	14	36	6	44	14	32	2
25	41	11	36.5	6.5	41	11	39	9	45	15	35	5	45	15	37	7	45	15	33	3
32	50	11.5	45.5	7	50	11.5	48	9.5	54	15.5	44	5.5	54	15.5	46	7.5	54	15.5	42	3.5

- * Negative figures in the column D indicate how much the load wires protrude from the cylinder body.
- * Adjust the auto switch after confirming the operating conditions in the actual setting.

Dimensions for Auto Switch Mounting

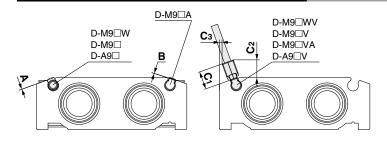

A Dimension [mr										
	Symbol	Bore size								
		6	10	16	20	25	32			
D-M9□, D-M9□W D-A9□	Α	0.5	0.5	0.5	0.5	0.5	0.5			
D-M9□A	В	1	1	1	1	1	1			
D-M9□V, D-M9□WV	C ₁	7.5	7	7.5	7.5	7.5	7.5			
D-M9□AV	C ₂	7.5	6	7.5	7.5	7	6.5			
D-A9□V	Сз	_	2.5	_	_	_	_			

How to Mount Auto Switches


When mounting and securing auto switches, they should be inserted into the cylinder's auto switch mounting rail from the direction shown in the drawing below.

After setting in the mounting position, use a flat head watchmaker's screwdriver to tighten the auto switch mounting screw that is included.

 When tightening an auto switch mounting screw, use a watchmaker's screwdriver with a handle of approx. 5 to 6 mm in diameter.

Tightening Torque for Auto Switch Mounting Screw [N·m]

Auto switch model	Tightening torque
D-M9□(V) D-M9□W(V)	0.05 to 0.15
D-M9□(V)	0.03 to 0.13
D-M9□A(V)	0.05 to 0.10

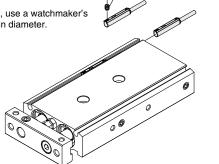

Auto switch mounting screw

 
(Included with auto switch)

M2.5 x 4L

∧Caution

1. Avoid proximity to magnetic objects

When the body of the cylinder fitted with auto switches is adjacent to a magnetic substance such as a ferrous metal plate, it is necessary to ensure that there is at least 10 mm between the cylinder's upper surface and the magnetic substance as shown in the figure below. Failure to provide adequate clearance may cause the auto switch to malfunction (switch does not turn on).



Other than the applicable auto switches listed in "How to Order," the following auto switches are also mountable. Refer to the **Web Catalog** for detailed specifications.

 
* Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)) are also available. For details, refer to the Web Catalog.

 


 
Prior to Use Auto Switch Connections and Examples

 
Sink Input Specifications

Source Input Specifications










Connect according to the applicable PLC input specifications, as the connection method will vary depending on the PLC input specifications.


Examples of AND (Series) and OR (Parallel) Connections

* When using solid state auto switches, ensure the application is set up so the signals for the first 50 ms are invalid. Depending on the operating environment, the product may not operate properly.


3-wire AND connection for NPN output (Using relays)

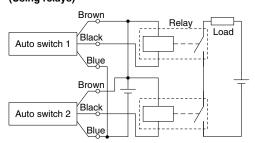


(Performed with auto switches only)

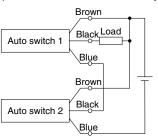


3-wire OR connection for NPN output

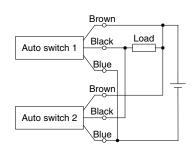


3-wire AND connection for PNP output (Using relays)

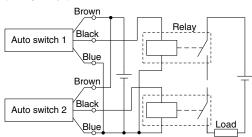


(Performed with auto switches only)

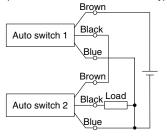

3-wire OR connection for PNP output

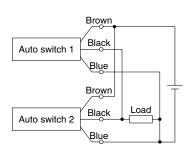

2-wire AND connection

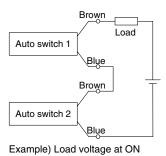

Power supply voltage: 24 VDC

Internal voltage drop: 4 V

When two auto switches are connected in series, a load may malfunction because the load voltage will decline when in the ON state.


The indicator lights will light up when both of the auto switches are in the ON state. Auto switches with a load voltage less than 20 V cannot be used. Please contact SMC if using AND connection for a heat-resistant solid state auto switch or a trimmer switch.

Load voltage at ON = Power supply voltage -

Internal voltage drop x 2 pcs. = 24 V - 4 V x 2 pcs.

= 16 V

2-wire OR connection

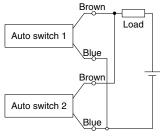

(Solid state)
When two auto
switches are
connected in parallel,
malfunction may occur
because the load
voltage will increase
when in the OFF state.

(Reed)
Because there is no current leakage, the load voltage will not increase when turned OFF. However, depending on the number of auto switches in the ON state, the indicator lights may sometimes grow dim or not light up, due to the dispersion and reduction of the current flowing to the auto switches.

Example) Load voltage at OFF Leakage current: 1 mA

Load impedance: $3 \text{ k}\Omega$

Load voltage at OFF = Leakage current x 2 pcs. x
Load impedance

Load impedance = 1 mA x 2 pcs. x 3 k Ω

= 6 V





CXS2 Series Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Mounting

⚠ Caution

1. Make sure that the surface on which the cylinder is to be mounted is flat (reference value for flatness: 0.05 or less).

Dual rod cylinders can be mounted from 3 directions, however, make sure that the surface on which the cylinder is to be mounted is flat (reference value for flatness: 0.05 or less). Otherwise, the accuracy of the piston rod operation is not achieved, and malfunctioning can occur.

2. Piston rod must be retracted when mounting the cylinder.

Scratches or gouges in the piston rod may lead to damaged bearings and/or seals and cause a malfunction or air leakage.

Piping

∧ Caution

1. Plug the appropriate supply port(s) according to the operating conditions.

Dual rod cylinders have 2 supply ports for each operating direction (3 supply ports for ø6 only). Plug the appropriate supply port according to the operating conditions. However, when switching the plugged port, verify air leakage. If small air leakage is detected, order the below plugs, and reassemble it.

Plug part no.: (ø6) CXS10-08-28747B

(ø10 to ø20) CXS20-08-28749A

(ø25 to ø32) CYP025-08B29449A (Rc 1/8)

CXS25-08-A3025B (NPT 1/8) CXS25-08-A3911A (G 1/8)

Stroke Adjustment

∧ Caution

1. After adjusting the stroke, make sure to tighten the hexagon nut to prevent it from loosening.

Dual rod cylinders have a bolt to adjust 0 to -5 mm strokes on the retracted end (IN).

Loosen the hexagon nut to adjust the stroke; however, make sure to tighten the hexagon nut after making an adjustment.

2. Never operate a cylinder with its bumper bolt removed.

Also, do not attempt to tighten the bumper bolt without using a nut.

If the bumper bolt is removed, the piston hits housing end surface causing damage to the cylinder. Therefore, do not use a cylinder without a bumper bolt.

Furthermore, if the bumper bolt is tightened without a nut, the piston seal is caught in the leveled part, damaging the seal.

Stroke Adjustment

⚠ Caution

3. The bumper located at the end of the bumper bolts
If the bumper has permanently settled onto the product or if it
is lost, an order can be placed by using the part numbers
listed below.

Bore size [mm]	6, 10, 15	20, 25	32			
Part no.	CXS10-34A 28747	CXS20-34A 28749	CXS32-34A 28751			
Qty.		1				

Disassembly and Maintenance

1. Never use a cylinder with its plate removed.

When removing the hexagon socket head cap screw on the end plate, the piston rod must be secured to prevent from rotating. However, if the sliding parts of the piston rod are scratched and gouged, a malfunction may occur.

When disassembling and reassembling the cylinder, please contact SMC or refer to the separate operation manual.

⚠ Warning

1. Take precautions when your hands are near the plate and housing.

Take sufficient care to avoid getting your hands or fingers caught when the cylinder is operated.

Operating Environment

⚠ Caution

- Do not operate the cylinder in a pressurized environment.
 The pressurized air may flow inside the cylinder due to its construction.
- Do not use as a stopper. This may cause a malfunction. When using as a stopper, select a stopper cylinder (RS series) or a compact guide cylinder (MGP series).

Speed Adjustment

⚠ Caution

1. A sudden extension may occur with CXS2□6.

CXS2\(\sigma\)6 has a low internal volume and sudden extension/ erratic movement may occur particularly when it is used at low speed. This sudden extension can be mitigated by combining the use of meter-in and meter-out speed controllers.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

★ Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, ⚠ Danger: Danger indicates a nazaru wiun a nigin level on the first avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or
 - replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

⚠ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

↑ Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F.

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362

https://www.smcworld.com

© 2023 SMC Corporation All Rights Reserved