
Rotary Clamp Cylinder/Standard Type

NK Series 912, 916, 920, 925 932, 940, 950, 963




Construction


MK12, 16

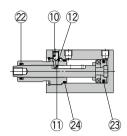

MK20 to 32

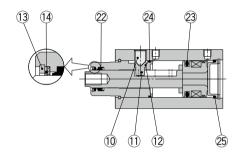

MK40 to 63

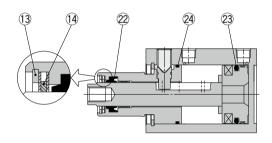

* The numbers correspond with those in the "Construction" of the MK series in the Web Catalog.

Seal/Guide Pin Kit List

| No. | Description | Material | Note |
|-----|----------------------------------|---------------------------|--------------------|
| 10 | Hexagon socket head set screw | Chromium molybdenum steel | |
| 11) | Guide pin | Stainless steel | |
| 12 | O-ring | NBR | 13 is a |
| 13 | Inverted internal retaining ring | Carbon tool steel | non-replaceable |
| 14) | Coil scraper | Phosphor bronze | part, so it is not |
| 22 | Rod seal | NBR | included in the |
| 23 | Piston seal | NBR | seal kit. |
| 24) | Gasket | NBR | |
| 25 | O-ring | NBB | |

Replacement Parts: Seal Kit

| Bore size (mm) | Part no. | Contents | |
|----------------|-----------|--------------------------------|--|
| 12 | CQSB12-PS | | |
| 16 | CQSB16-PS | Set of nos. 22, 23, 24 | |
| 20 | MK20Z-PS | | |
| 25 | MK25Z-PS | Set of nos. 14, 22, 23, 24, 25 | |
| 32 | MK32Z-PS | | |
| 40 | MK2T40-PS | | |
| 50 | MK2T50-PS | Set of nos. 14, 22, 23, 24 | |
| 63 | MK63Z-PS | | |

- * The seal kit includes numbers in the table. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: Guide Pin Kit

| riepiacement i arts. Guide i in Kit | | | | | |
|-------------------------------------|----------|-----------------------------|--|--|--|
| Bore size (mm) | Part no. | Contents | | | |
| 12 | MK12Z-GS | | | | |
| 16 | MK16Z-GS | | | | |
| 20 | MK20Z-GS | | | | |
| 25 | MK25Z-GS | Set of nos. (10, (11), (12) | | | |
| 32 | MK32Z-GS | Set of flos. (b), (f), (2) | | | |
| 40 | MK40Z-GS | | | | |
| 50 | MK50Z-GS | | | | |
| 63 | MK63Z-GS | | | | |

- * The guide pin kit includes numbers in the table. Order the guide pin kit based on each bore size.
- * For the replacement procedure of the replacement parts/seal and guide pin kits, refer to the Operation Manual.

