
CUJ Series 04, 06, 08, 010

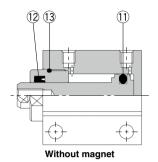


Construction

Double acting



Single acting, spring return

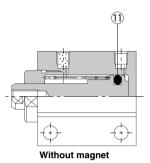

* The numbers correspond with those in the "Construction" of the CUJ series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
11	Piston seal		
12	Rod seal	NBR	
13	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
Double acting			
4	CUJB4-PS	Cot of non	
6	CUJB6-PS	Set of nos.	
8	CUJB8-PS	and a grease pack	
10	CUJB10-PS	and a grease pack	

 $[\]ast$ The seal kit 1 to 3 comes as a set. Use the kit number for each bore

Single acting, spring return

<u> </u>		
4	CUJB4-S-PS	
6	CUJB6-S-PS	Set of no. 11
8	CUJB8-S-PS	and a grease pack
10	CUJB10-S-PS	

^{*} Use the following part number for ordering a grease pack only. Grease pack part no.: GR-L-005 (5 g)

Rotary Actuators Air Grippers


Mini Free Mount Cylinder

CUJ Series ø12, Ø16, Ø20




Construction

Double acting

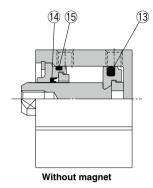

Single acting, spring return

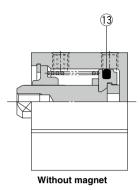

* The numbers correspond with those in the "Construction" of the CUJ series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
13	Piston seal		
14)	Rod seal	NBR	
15	O-ring		

Replacement Parts: Seal Kit

riepiacement i arts. Sear Kit			
Bore size (mm)	Part no.	Contents	
Double acting			
12	CUJB12-PS	Set of nos.	
16	CUJB16-PS	(13), (14), (15),	
20	CUJB20-PS	and a grease pack	

 $[\]ast$ The seal kit $\ensuremath{(\ensuremath{\mathfrak{I}})}$ to $\ensuremath{(\ensuremath{\mathfrak{I}})}$ comes as a set. Use the kit number for each bore size.

Single acting, spring return

12	CUJB12-S-PS	Set of no. 13
16	CUJB16-S-PS	
20	CUJB20-S-PS	and a grease pack

^{*} Use the following part number for ordering a grease pack only. Grease pack part no.: GR-L-005 (5 g)