



ORIGINAL INSTRUCTIONS

Instruction Manual
Vacuum Gripper
Series ZXP7* 4*



The intended use of vacuum gripper is to mount on a collaborative robot and grip / release a workpiece.

1 Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

- ¹⁾ISO 4414: Pneumatic fluid power — General rules and safety requirements for systems and their components.
ISO 4413: Hydraulic fluid power — General rules and safety requirements for systems and their components
IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1: Robotics — Safety requirements — Part 1: Industrial robots
- Refer to product catalogue, Operation Manual and Handling Precautions for SMC Products for additional information.
 - Keep this manual in a safe place for future reference.

Danger	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

Warning

- **Always ensure compliance with relevant safety laws and standards.**
- All work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.

2 Specifications

2.1 Common Specifications

Mechanical interface		Compliant with “ISO 9409-1-50-4-M6”
Fluid		Air
Operating temperature range [°C]		5 to 50
Weight [g] ^{Note1)}	ZXP7*41-X1	810 (597)
	ZXP7*42-X1	790 (577)
Max. workload [kg] ^{Note2)}		7
Impact / Vibration resistance [m/s ²] ^{Note3)}		150 / 30
Air supply port (P)		One touch fitting (Φ6)
Power supply voltage [V]		DC24 ± 10%

Note 1) The weight changes by the selected suction cup.
Note 2) Limited by the cup diameter, mounting orientation or workpiece. The weight of the workpiece shall be maximum workload or less.
Gripping or transfer of workload exceeding the maximum workload leads to the decrease of vacuum due to air leakage.
Note 3) Impact resistance: The characteristics are satisfied after tested one time in each of the X, Y and Z directions without energization. (Initial value)
Vibration resistance: The characteristics are satisfied after tested a one sweep in each of the X, Y and Z directions at 10 to 500Hz without energization. (Initial value)

2 Specifications - continued

2.2 Ejector Specifications

Max. vacuum pressure [kPa] ^{Note4)}	-84
Max. suction flow [L/min(ANR)] ^{Note4)}	17
Air consumption [L/min(ANR)] ^{Note4)}	57
Supply pressure range [MPa]	0.3 to 0.55
Standard supply pressure [MPa] ^{Note5)}	0.5

Note 4) Values at the standard supply pressure. Values are based on standard of SMC measurements. They depend on atmospheric pressure (weather, altitude, etc.) and measurement method.
Note 5) This shows the pressure just before the supply (P) port. The performance such as vacuum pressure may reduce, depending on the supply air capacity, the piping volume (piping length and diameter) and affection of air consumption of other devices which operate at the same time.

2.3 Pressure Sensor Specifications

Model	PSE541-R04
Rated pressure range [kPa]	0 to -101
Accuracy (Ambient temperature at 25°C)	±2 F.S. (within rated pressure range)
Linearity [%]	±0.4 F.S.
Repeatability [%]	±0.2 F.S.
Temperature characteristics [%]	± 2 F.S. (25°C reference)

2.4 Valve Specification


Model	V114
-------	------

3 Installation


- Do not install the product unless the safety instructions have been read and understood.

3.1 Parts included in the package

- Robot mounting flange: 1 pc.



- Vacuum gripper: 1 pc.

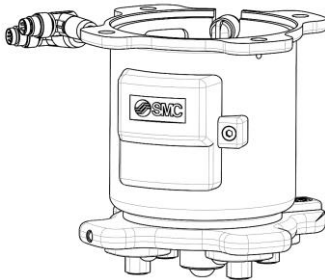


- Suction cup with adapter: 4 pcs (When “suction cup series” is selected)




3 Installation - continued

- Parallel pin (6x10): 1 pc.
- Hexagon socket head cap screw (M6x10): 8 pcs

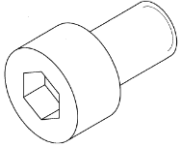

- Plug: 4pcs. Part No. M-3P (when “cup mounting flange shape” is selected”. Used for decreasing the number of suction cups).

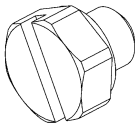

- Polyurethane tubing: 2m. Part number: TU0604BU.

3.2 Mounting



Warning

Mounting procedure

- Confirm the gasket seal on the adapter, then mount 4 cups with adapter to the vacuum gripper. (Tightening torque: 1N · m or tighten for 45 degrees using a spanner after tightening by hand)
- Mount parallel pin to the robot flange pin hole.
- Align the parallel pin of the robot flange with the robot mounting flange and assemble them with bolts included in the accessories (Tightening torque: 5.2+/-0.5 Nm).
- Tighten the vacuum gripper to the robot mounting flange. (Tightening torque: 5.2+/-0.5 Nm)

Removal procedure


Removal should be performed by following the mounting procedure in reverse.

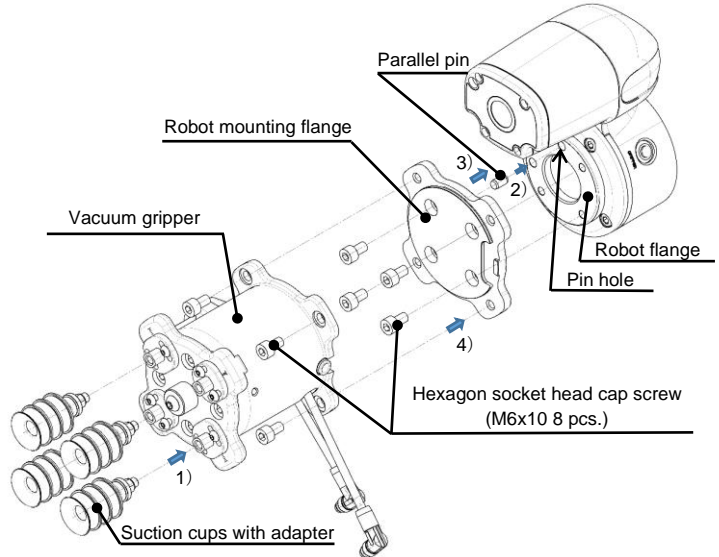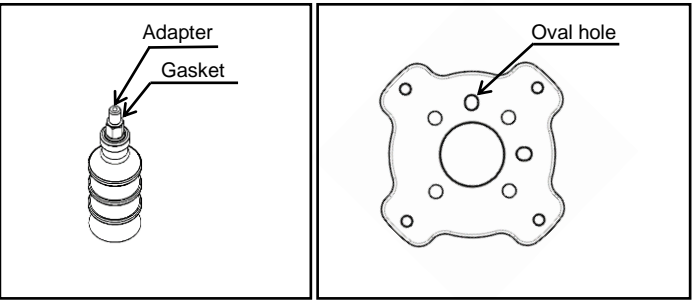

3 Installation - continued

Caution


Vacuum gripper direction can be changed in 90-degree increments when attached to a robot. At that time, install it in the direction of the lower figure. (90-degree between the camera module and the cover of the vacuum)

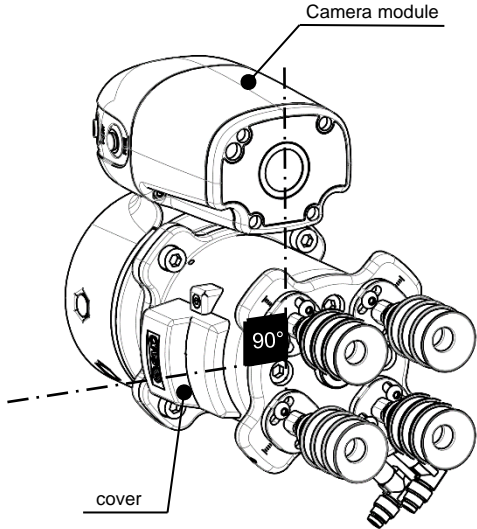

3.3 Wiring

- Mount the M8 connector cables
Mount the M8 connector cables to the M8 connectors (socket) of the robot flange. The example of mounting for ZXP7A41-X1 is shown below. Please connect two M8 connector cables to the specified sockets on the robot. The ZXP7A42-X1 has only one M8 connector cable and it should be mounted to the socket on the robot.
* Do not energize while securing the connectors.
* Check that the connectors are not loose

<Example of mounting>

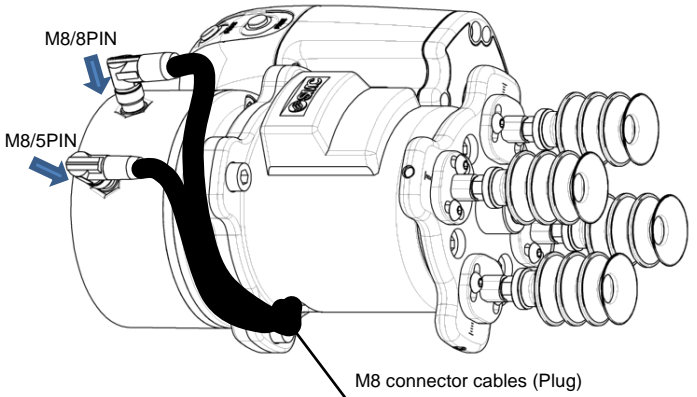

3 Installation - continued

- For the ZXP7*41 version - M8/8 pin and M8/5 pin

Pin	Wire color	Function
1	White	Power supply voltage (24V)
2	-	N.C. (Non connection)
3	-	N.C. (Non connection)
4	-	N.C. (Non connection)
5	Gray	Pilot valve for supply *
6	Pink	Release valve *
7	-	N.C. (Non connection)
8	-	N.C. (Non connection)

* Set the polarity of the robot side output to NPN.

Pin	Wire color	Function
1	Brown	Power supply voltage (24V)
2	-	N.C. (Non connection)
3	-	N.C. (Non connection)
4	Black	Pressure sensor output
5	Gray	Power supply voltage (GND)

- For the ZXP7*42 version - M8/8 pin

Pin	Wire color	Function
1	White	Power supply voltage (24V)
2	-	N.C. (Non connection)
3	-	N.C. (Non connection)
4	-	N.C. (Non connection)
5	Gray	Pressure sensor output
6	Black	Pilot valve for supply *
7	Blue	Release valve *
8	Red	Power supply voltage (GND)


* Set the polarity of the robot side output to NPN.

3.4 Piping


Caution

- Before connecting piping make sure to clean up chips, cutting oil, dust etc.
- When installing piping or fittings, ensure sealant material does not enter inside the port. When using seal tape, leave 1 thread exposed on the end of the pipe/fitting.
- Tighten fittings to the specified tightening torque.
- Tubing
 - Connect a tube (applicable tube O.D. Ø6) to the air pressure supply (P) port.
 - To remove the tube, push the release button and pull out the tube.

3 Installation - continued

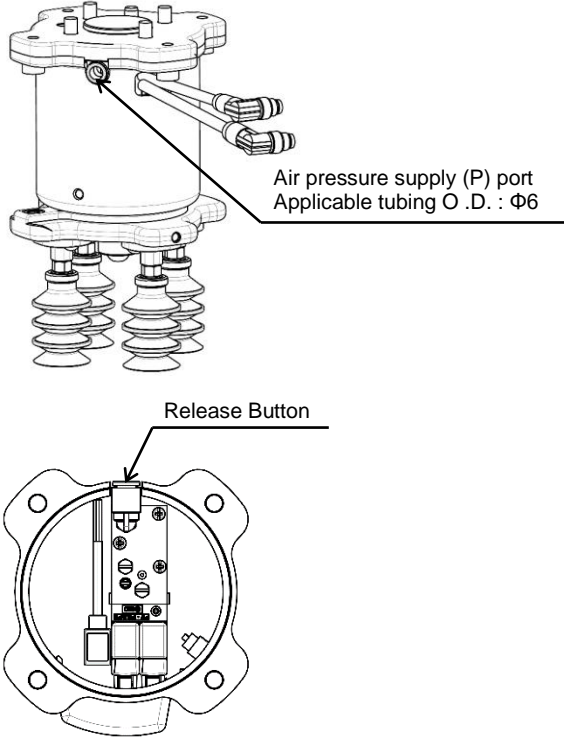

3.5 Circuit diagram

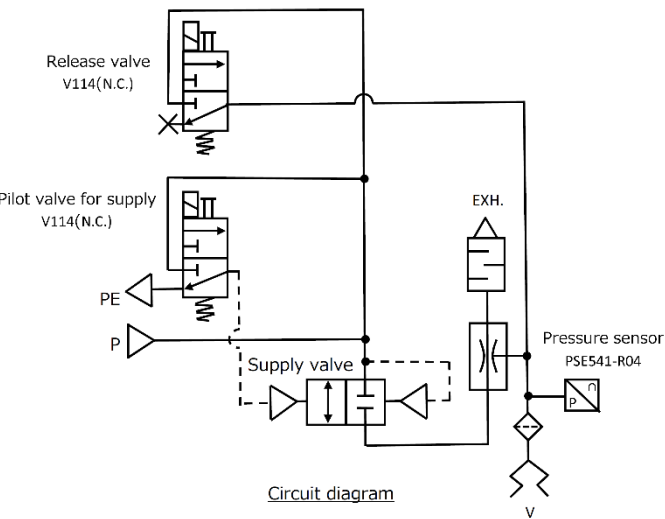

3.6 Environment

Warning

- Do not use in an environment where corrosive gases, chemicals, salt water or steam are present.
- Do not use in an explosive atmosphere.
- Do not expose to direct sunlight. Use a suitable protective cover.
- Do not install in a location subject to vibration or impact in excess of the product's specifications.
- Do not mount in a location exposed to radiant heat that would result in temperatures in excess of the product's specifications.

3.7 TMComponent software – robot settings

Refer to Operation Manual TQ1230001-OM102 for settings.

4 How to Order

Refer to catalogue for 'How to Order'.

5 Outline Dimensions (mm)

Refer to catalogue for outline dimensions.

6 Maintenance

Implement the maintenance and check shown below in order to use the vacuum gripper safely and in an appropriate way for a long period of time.

6.1 Maintenance for vacuum gripper


Caution

- Check before and after the maintenance work**
When the product is to be removed, turn off the power supply, and be sure to cut off the supply pressure and exhaust the compressed air. Confirm that the air is released to atmosphere. When mounting the product after the maintenance work, supply compressed air, connect to the power, check if it functions properly and have a leakage inspection.
- Maintenance should be performed according to the procedure indicated in the Operation Manual.**
Improper handling can cause damage and malfunction of equipment and machinery.
- Maintenance work**
Compressed air can be dangerous when handled incorrectly. Therefore, in addition to observing the product specifications, replacement of silencer and other maintenance activities should be performed by personnel with sufficient knowledge and experience pertaining to pneumatic equipment.
- Draining**
Remove condensate from air filters and mist separators regularly. If the collected drainage is drained to the downstream side, it can stick inside of the product, causing operation failure and failure to reach the specified vacuum pressure.

- Replace the silencer built into the vacuum gripper regularly.**
It is recommended to replace the silencer when the pressure drop reaches 5kPa as a guideline. The replacement cycle varies depending on the operating conditions, operating environment and supply air quality.

However, if there is a vacuum pressure drop and/or delay in the vacuum (gripping) response time which causes problem with the settings during operation, stop the operation of the product and replace the silencer regardless of the above mentioned replacement guideline.

- Part number for the silencer assembly for replacement: ZX1-HS1**
- Silencer assembly replacement procedure**
 - Remove the cover.
 - Loosen the 2 cross-recessed pan head screws to remove the silencer assembly.
 - Assemble the new silencer assembly.
 - Mount the cover.

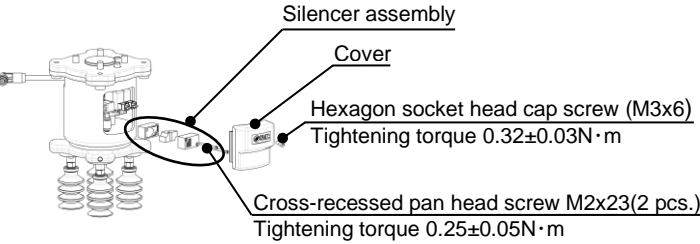

- Do not disassemble or modify the product, other than the replacement parts specified in the operation manual.**


6 Maintenance - continued

6.2 Maintenance for suction cup

Caution

- Suction cups are disposable. Replace them on a regular basis.**
Continued use of suction cups will cause wear and tear on the gripping surface, and the exterior dimensions will gradually get smaller and smaller. As the cups' diameter gets smaller, their lifting force will decrease, though gripping will still remain possible. It is extremely difficult to provide advice on the frequency of suction cup replacement. This is because there are numerous factors at work, including surface roughness, operating environment (temperature, humidity, ozone, solvents, etc.), and operating conditions (vacuum pressure, workpiece weight, pressing force of the suction cups on the workpieces, presence or absence of a buffer, etc.). The weakening of bent parts or the wear or sticking of rubber parts may occur with the bellows type cup. The customer should decide when suction cups should be replaced, based on their condition at the time of initial use. The bolts may become loose depending on the operating conditions and environment. Ensure the maintenance is performed regularly.

- Replacement of the suction cup**
 - Pull the lock ring upward, and, after lifting it up to the adapter, remove the old cup by pulling it downward.
 - While holding the lock ring in the raised position place a new cup onto the adapter.
 - Confirm that the cup is securely in place, and then return the lock ring to its original position.Note) The cup without lock ring is just inserted to the end of the adapter.

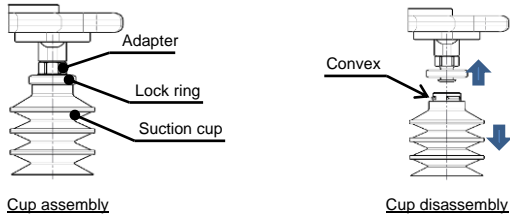

7 Limitations of Use


7.1 Limited warranty and disclaimer/compliance requirements

Refer to Handling Precautions for SMC Products.

Caution

Exhaust Noise

When vacuum ejector generates vacuum, noise can be heard from the exhaust port when the standard supply pressure is close to the pressure that generates peak vacuum pressure making vacuum pressure unstable. If the vacuum pressure range is adequate for gripping, there should not be a problem. If the noise causes a problem or affects the setting of the pressure switch, change the supply pressure slightly to avoid the pressure range of the noise.

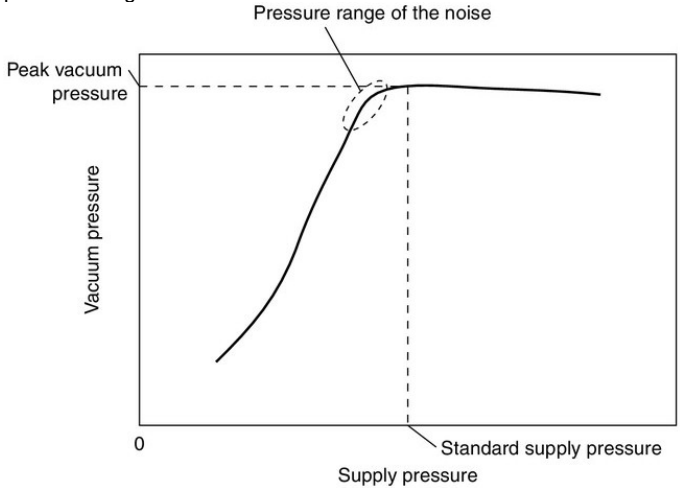

8 Product Disposal

This product shall not be disposed of as municipal waste. Check your local regulations and guidelines to dispose this product correctly, in order to reduce the impact on human health and the environment.

9 Contacts

Refer to www.smcworld.com or www.smc.eu for your local distributor/importer.

SMC Corporation

URL : [https:// www.smcworld.com](https://www.smcworld.com) (Global) [https:// www.smc.eu](https://www.smc.eu) (Europe)
SMC Corporation, 1-5-5, Kyobashi, Chuo-ku, Tokyo 104-0031, JAPAN
Specifications are subject to change without prior notice from the manufacturer.
© SMC Corporation All Rights Reserved.
Template DKP50047-F-085O